
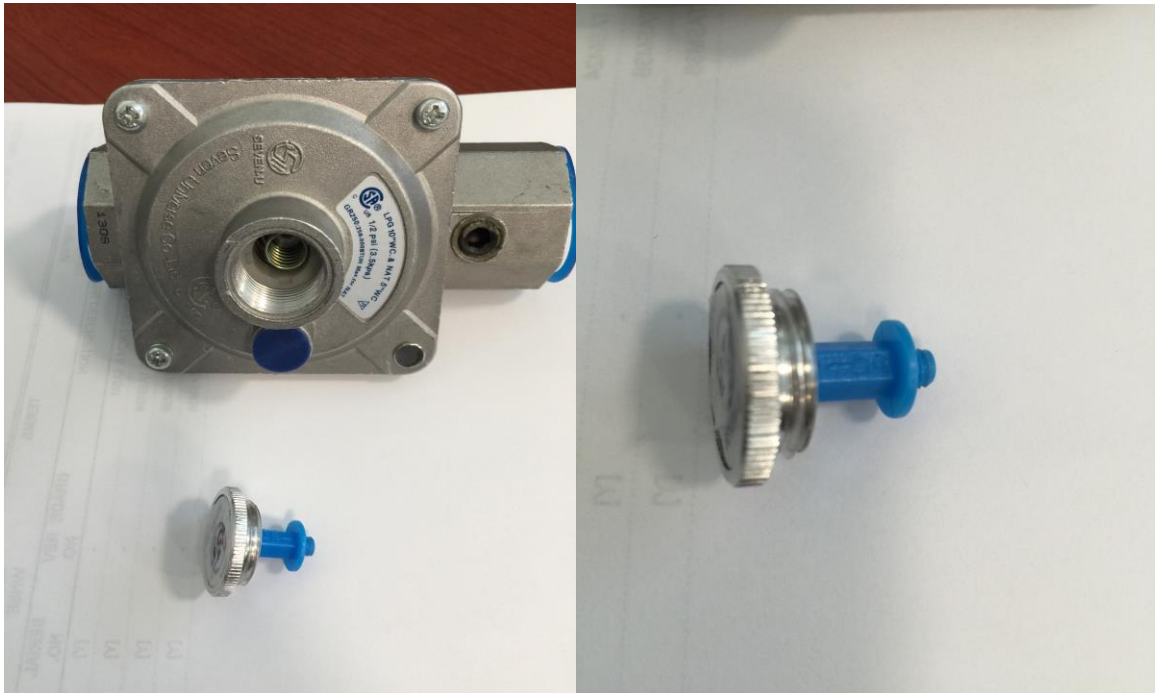


## Convert a Regulator to LP

*To change the regulator from natural to LP simply unscrew and remove the vent cap. Flip the vent cap insert over and reinsert it. Reinstall the vent cap and your conversion is complete.*

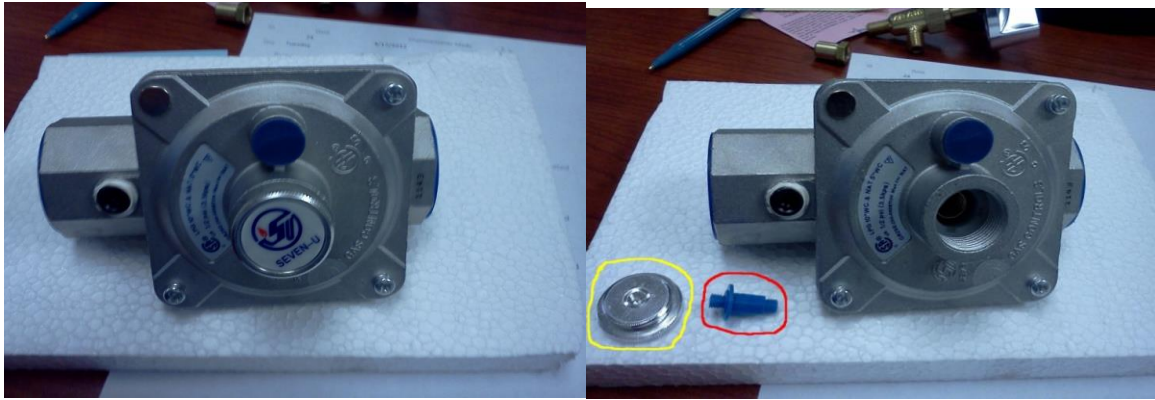

(LP setting of pin- above pictures)