



PARTS MANUAL

V SERIES NON-INSULATED HOLDING & PROOFING CABINET

MODEL:

VHFA9 ML-138070

VHFA18 ML-138071

VP18 ML-138089



For additional information on Vulcan-Hart or to locate an authorized
parts

and service provider in your area, visit our website at www.vulcanequipment.com

VULCAN-HART
DIVISION OF ITW FOOD EQUIPMENT GROUP, LLC

www.vulcanequipment.com

Vulcan ©2010 All Rights Reserved

3600 NORTH POINT BLVD.
BALTIMORE, MD 21222

F-41183 (06-13)

Vulcan-Hart Food Holding and Transportation Cabinets are produced with quality workmanship and material. Proper installation, usage and maintenance will result in many years of satisfactory performance.

Before performing maintenance on the cabinet, thoroughly read the Service Manual and carefully follow all instructions in the order given. Refer to the Installation and Operation Manual for detailed operating instructions.

This manual is applicable only to models listed on the cover page.

To obtain Service and Parts information, contact Vulcan-Hart Service Department at the address listed on the front cover of this manual or refer to our website: www.vulcanequipment.com.

Technical Service 1-800-814-2028

Service Parts 1-866-628-0485

When calling for Technical Service or Parts, have the model number and serial number available.

**VHFA - SERIES
(NON-INSULATED HOLDING)**

DESCRIPTION	VULCAN #
CASTER, 5" RIGID (THRU 12-31-09)	851800 -684
CASTER, 5" SWIVEL (THRU 12-31-09)	851800 -685
CASTER, 5" RIGID	851800 -38
CASTER, 5" SWIVEL	851800 -39
CLIP, ELEMENT	851800 -14
CORD, POWER 16/3 120V. 15 AMP (VHFA9)	851800 -6
CORD, POWER 12/3 120V. 20 AMP (VHFA18)	851800 -148
COVER, ELEMENT VHFA (PRIOR TO MARCH 2012)	851800 -801
COVER, ELEMENT VHFA (MARCH 2012 TO PRESENT)	851800 -829
DOOR, GLASS (VHFA9)	851800 -694
DOOR, GLASS (VHFA18)	851800 -695
ELEMENT, 120V - 600W (VHFA9)	851800 -11
ELEMENT, 120V - 1000W (VHFA18)	851800 -151
FAN, COOLING 120V.	851800 -58
GASKET, DOOR (VHFA9)	851800 -835
GASKET, DOOR (VHFA18)	851800 -836
HINGE, DOOR (THRU 1-31-10)	851800 -18
HINGE, PIVOT	851800 -789
HOLDER, CORD	851800 -790
HOLDER, PROBE THERMOMETER	851800 -29
HOLDER, PROBE THERMOSTAT	851800 -32
KNOB, THERMOSTAT	851800 -31
LATCH, DOOR MAGNETIC	851800 -626
LIGHT, INDICATOR DUAL 240V	851800 -22
RACK, SIDE	851800 -689
SWITCH, ROCKER (DIGITAL CONTROLS OR FAN)	851800 -770
THERMOMETER, DIAL	851800 -28
THERMOSTAT	851800 -30

(NON-INSULATED PROOFER)

DESCRIPTION	VULCAN #
CASTER, 5" RIGID	851800 -38
CASTER, 5" SWIVEL	851800 -39
CLIP, ELEMENT	851800 -14
CORD, POWER 12/3 120V. 20 AMP	851800 -148
COVER, ELEMENT VP18 (PRIOR TO MARCH 2012)	851800 -827
COVER, ELEMENT VP18 (MARCH 2012 TO PRESENT)	851800 -828
DOOR, GLASS (VP18)	851800 -695
ELEMENT, 120V - 1000W	851800 -151
FAN, MOISTURE (120V.)	851800 -793
FAN, COOLING (120V.)	851800 -655
DOOR, GLASS (VHFA18 / VP18)	851800 -836
HINGE, PIVOT	851800 -789
HOLDER, CORD	851800 -790
HOLDER, PROBE THERMOMETER	851800 -29
HOLDER, PROBE THERMOSTAT	851800 -32
KNOB, THERMOSTAT	851800 -31
LATCH, DOOR MAGNETIC	851800 -626
LIGHT, INDICATOR DUAL 240V	851800 -22
PAN, PROOFER 12 X 10 X 2 1/2"	851800 -818
SLIDES, TRAY	851800 -310
SWITCH, DOUBLE POLE/THROW	851800 -792
SWITCH, ROCKER (DIGITAL CONTROLS OR FAN)	851800 -770
THERMOMETER, DIAL	851800 -28
THERMOSTAT	851800 -30