



## ***SERVICE MANUAL***

### **V SERIES FOOD HOLDING & TRANSPORTATION CABINETS AND BANQUET CARTS**

#### **MODELS:**

|        |           |
|--------|-----------|
| VB90   | ML-126548 |
| VB96   | ML-126550 |
| VB150  | ML-126552 |
| VBP5I  | ML-138030 |
| VBP7I  | ML-126358 |
| VBP13I | ML-126359 |
| VBP15I | ML-126360 |
| VBP33  | ML-138075 |
| VBP77I | ML-126361 |
| VBS15  | ML-138033 |
| VHA9   | ML-138072 |
| VHA18  | ML-138073 |
| VHDP5  | ML-138035 |
| VHFA9  | ML-138070 |
| VHFA18 | ML-138071 |
| VHP3   | ML-126343 |
| VHP7   | ML-126344 |
| VHP8   | ML-126345 |
| VHP15  | ML-126346 |
| VHP20  | ML-126347 |



**This manual is prepared for the use of trained Vulcan Service Technicians and should not be used by those not properly qualified.**

**This manual is not intended to be all encompassing. You should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments, and skills required to perform the procedure.**

**Reproduction or other use of this Manual, without the express written consent of Vulcan, is prohibited.**

For additional information on Vulcan-Hart or to locate an authorized parts and service provider in your area, visit our website at [www.vulcanhart.com](http://www.vulcanhart.com)

---

## IMPORTANT FOR YOUR SAFETY

**THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL ELECTRICAL EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.**

**READ THIS MANUAL THOROUGHLY BEFORE OPERATING, INSTALLING OR PERFORMING MAINTENANCE ON THE EQUIPMENT.**

- △ WARNING** Failure to follow instructions in this manual can cause property damage, injury, or death.
- △ WARNING** Always Perform the Lockout/Tagout procedure before removing any sheet metal panels or attempting to service this equipment. Failure to comply with this procedure can cause property damage, injury, or death.
- △ WARNING** Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death.
- △ WARNING** Do NOT operate this equipment without properly placing and securing all covers and access panels.
- △ WARNING** In the event of a power failure, do not attempt to operate this device.
- △ WARNING** Electrical and grounding connections must comply with the applicable portions of the National Electric Code and/or all local electric codes.
- △ WARNING** Appliances equipped with a flexible electric supply cord, are provided with a three-prong grounding plug. It is imperative that this plug be connected into a properly grounded three-prong receptacle. If the receptacle is not the proper grounding type, contact an electrician. Do NOT remove the grounding prong from the plug.

## TABLE OF CONTENTS

|  |                |
|--|----------------|
| <b>IMPORTANT FOR YOUR SAFETY</b> .....         | <b>1</b>       |
| <b>GENERAL</b> .....                           | <b>3</b>       |
| INTRODUCTION .....                             | 3              |
| INSTALLATION .....                             | 3              |
| OPERATION .....                                | 3              |
| CLEANING .....                                 | 3              |
| ELECTRICAL REQUIREMENTS .....                  | 3              |
| SERIAL NUMBER LOCATION .....                   | 3              |
| TOOLS REQUIRED .....                           | 3              |
| <b>SPECIFICATIONS</b> .....                    | <b>4</b>       |
| <b>COMPONENT LOCATION</b> .....                | <b>5</b>       |
| CONTROLS .....                                 | 5              |
| ELEMENTS .....                                 | 5              |
| PROBE .....                                    | 5              |
| POWER CORD .....                               | 5              |
| CONTROLS (VHFA9, VHFA18) .....                 | 6              |
| POWER CORD WRAP (VHFA9, VHFA18) .....          | 6              |
| FAN (VHFA9, VHFA18) .....                      | 6              |
| <b>COMPONENT FUNCTION</b> .....                | <b>7</b>       |
| CONTROLS .....                                 | 7              |
| ELEMENTS .....                                 | 7              |
| PROBE .....                                    | 7              |
| CONTROLS (VHFA9, VHFA18) .....                 | 7              |
| FAN .....                                      | 8              |
| ELEMENTS (VHFA9, VHFA18) .....                 | 8              |
| PROBE .....                                    | 8              |
| <b>LOCKOUT / TAGOUT PROCEDURE</b> .....        | <b>8</b>       |
| <b>COMPONENT REMOVAL AND REPLACEMENT</b> ..... | <b>9</b>       |
| COVER REMOVAL .....                            | 9              |
| THERMOMETER .....                              | 9              |
| THERMOSTAT .....                               | 10             |
| THERMOSTAT CALIBRATION .....                   | 10             |
| DUAL LIGHT INDICATOR .....                     | 11             |
| FAN .....                                      | 11             |
| ON / OFF SWITCH .....                          | 12             |
| ELEMENT .....                                  | 12             |
| POWER CORD .....                               | 13             |
| DOOR AND HINGE .....                           | 13             |
| DOOR GASKET .....                              | 14             |
| <b>SERVICE &amp; PARTS INFORMATION</b> .....   | <b>14</b>      |
| <b>TROUBLE SHOOTING</b> .....                  | <b>15</b>      |
| <b>WIRE DIAGRAMS</b> .....                     | <b>16 – 19</b> |





































