

**Step 4:**

Complete plumbing connection to drain and water supply. Remove aerator to "flush" system then reconnect. Check connection for leaks.



200 Heartland Boulevard, Edgewood, NY 11717-8380

© ADVANCE TABCO, JUNE 2005



**Installation Instructions for  
BUDGET SINKS**



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Sinks manufactured by **ADVANCE TABCO**® are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO**® does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

## CONTENTS INCLUDE:


- (1) Laundry/Utility Sink
- (4) legs with Adjustable Feet
- (1) Drain Assembly
- (4) Set Screws

## TOOLS REQUIRED:

- 5/32" Allen Wrench
- Pipe Wrench
- Adjustable Wrench
- Level

### Step 1:

Remove legs and drain located in bottom carton. Turn Sink upside down and remove the "Red Cap" where set screws can be found (**Illustration 1**).

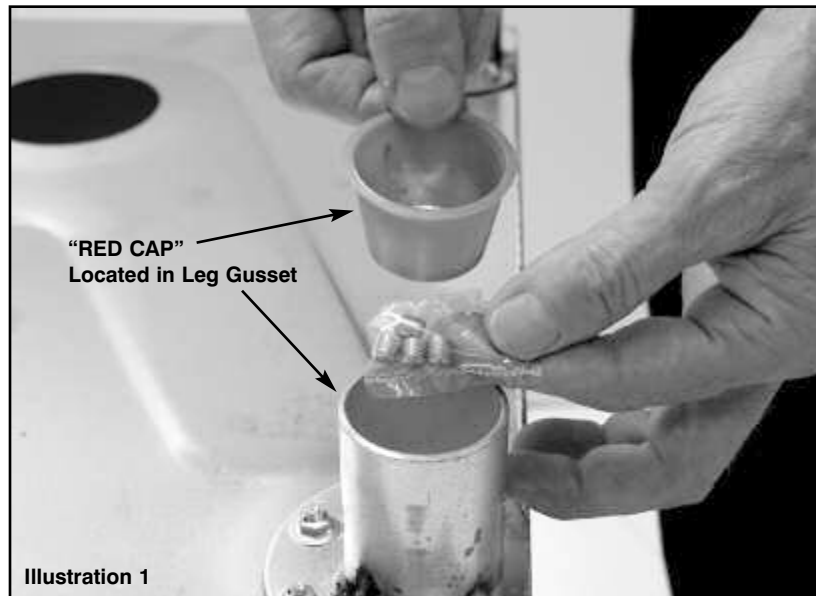

### Step 2:


Insert legs into Gusset (**Illustration 2**), and secure with Set Screws (**Illustration 2a**).



Illustration 2a

### Step 3:

Turn Sink to upright position. Pre-Plumb Drain and Faucet. Position Sink at desired location and level by turning adjustable Bullet Feet (**Illustration 3**).

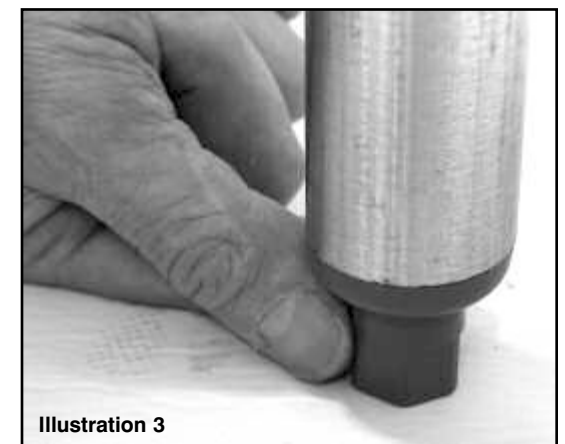

Continued >>